


TANDEMBOX – A-Design / 设计


内低抽
Inner drawer

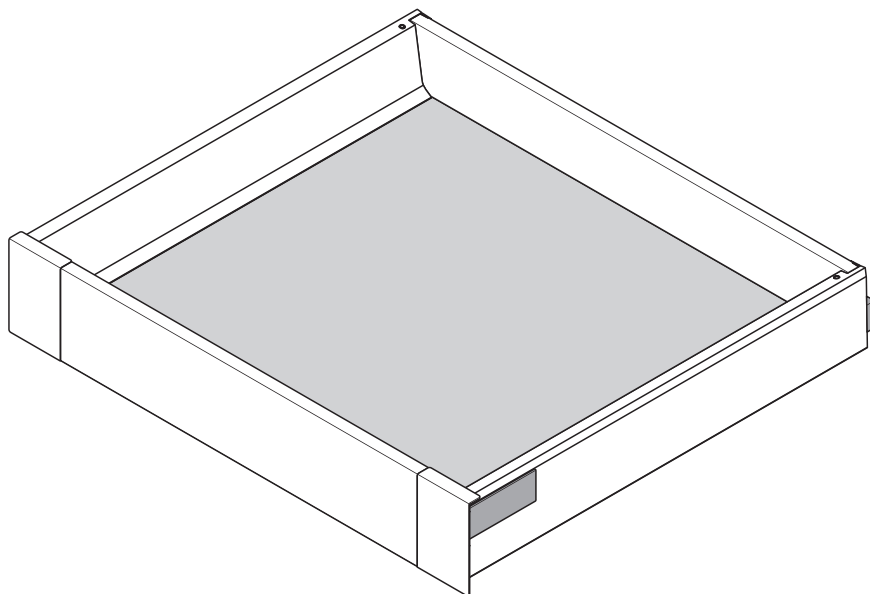


安装说明
Assembly instruction

柜体内所需空间
Space requirements in cabinet


*高度73以上用 ZIF.80M7
*73mm minimum dimension can be achieved by using ZIF.80M7

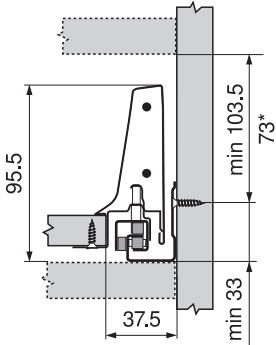


使用划卡的面板的打孔尺寸
Front drilling distance for latch

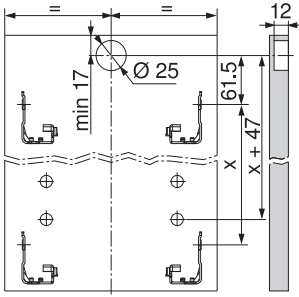

背板安装尺寸
Back installation dimensions

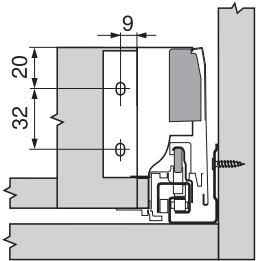


用于 16 mm 刨花板的裁切尺寸
Cutting dim. for 16 mm chipboard

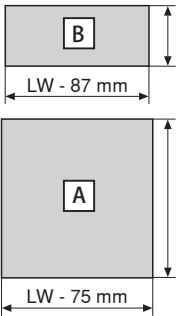


背板 / Back
84 mm

底板 / Base
木背板 / Chipboard back
NL - 24 mm

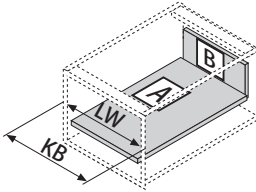


KB 柜体宽度 / Cabinet width
LW 柜体净宽 / Inner cabinet width
NL 标称长度 / Nominal length


组装面板
Assembly front

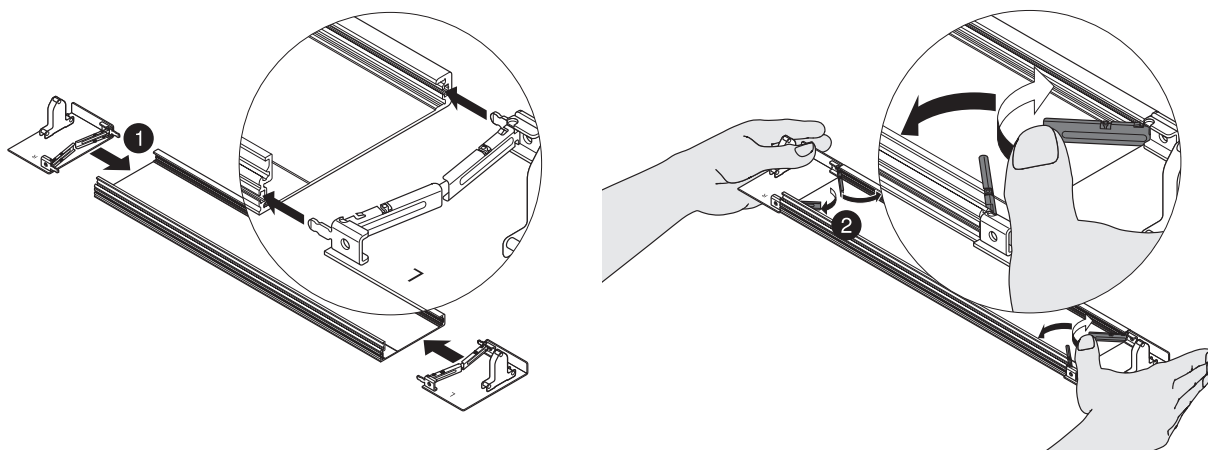



安装面板
Assembly front

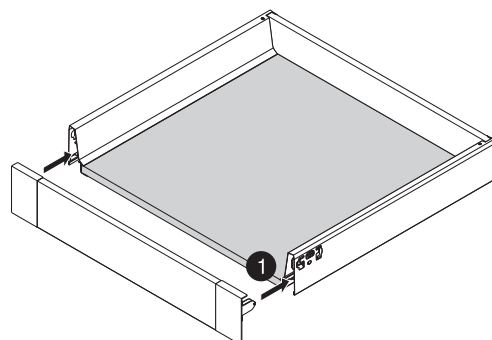

安装装饰盖
Assembly cover cap

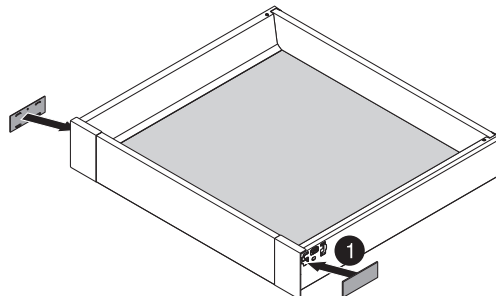


拆卸面板
Removal of front

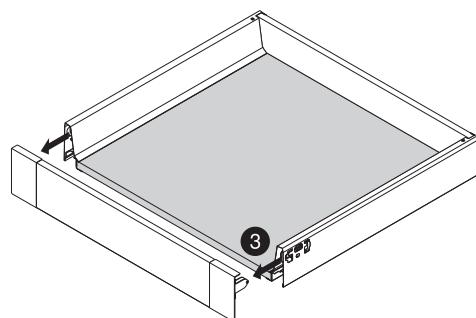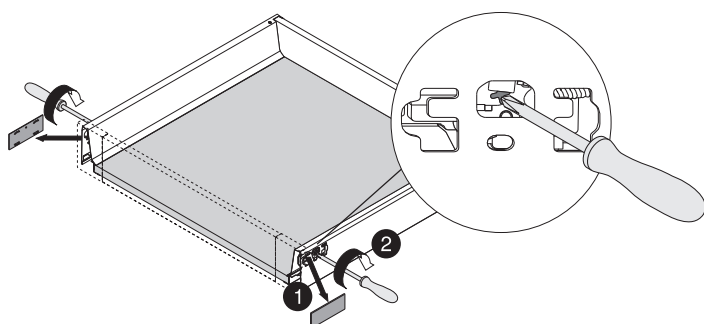


安装面板固定件 Mounting front fixing


柜体宽度 > 600
Starting with cabinet width > 600

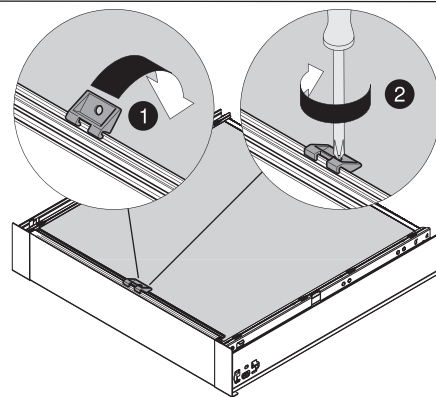


安装把手和划卡 Assembly handle and latch

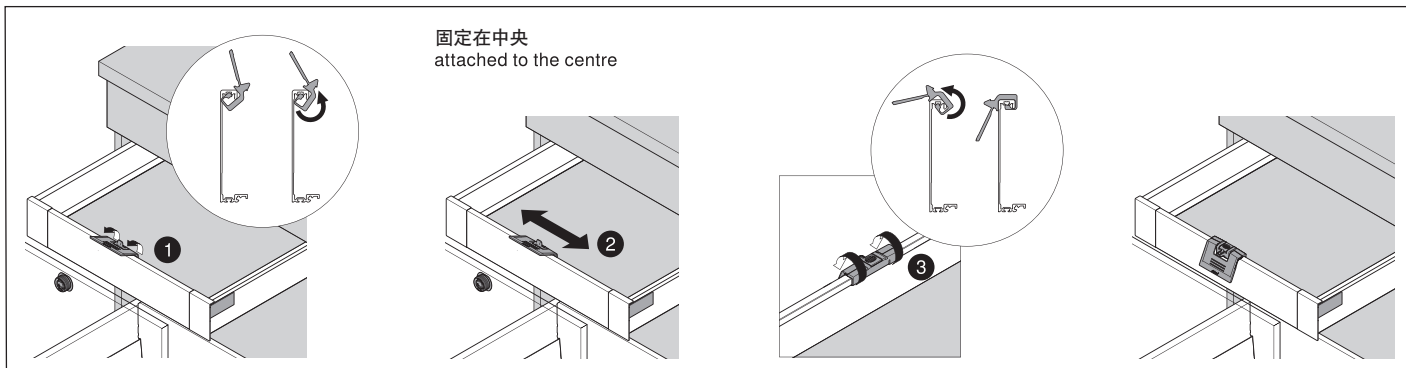

激活划卡 Latch is activated

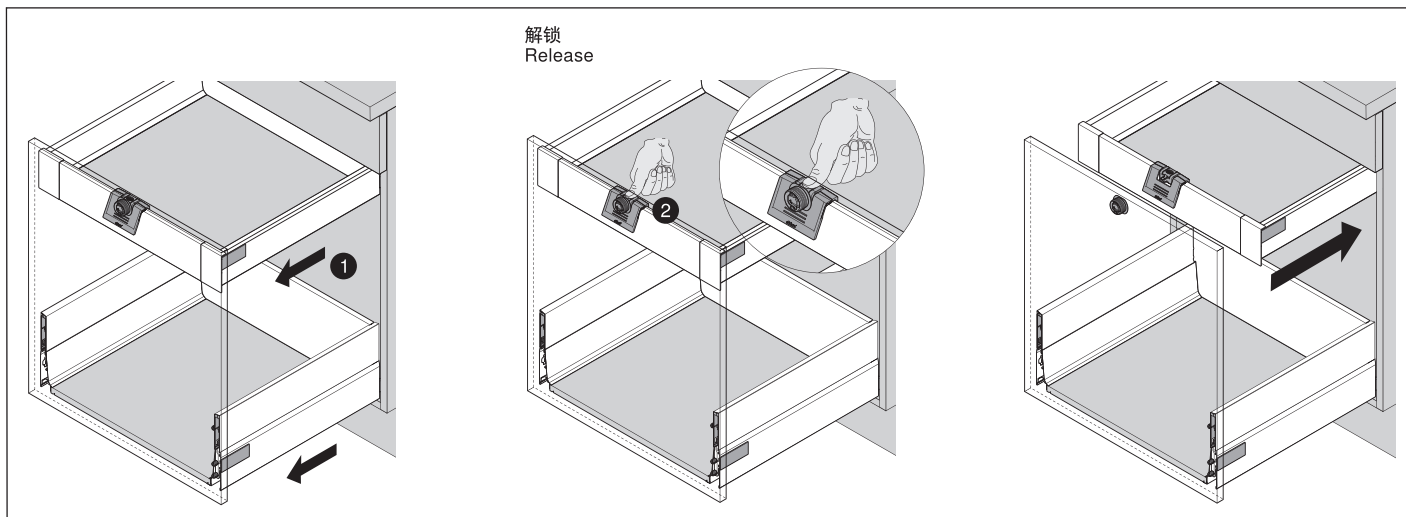

解除划卡激活 Deactivate latch

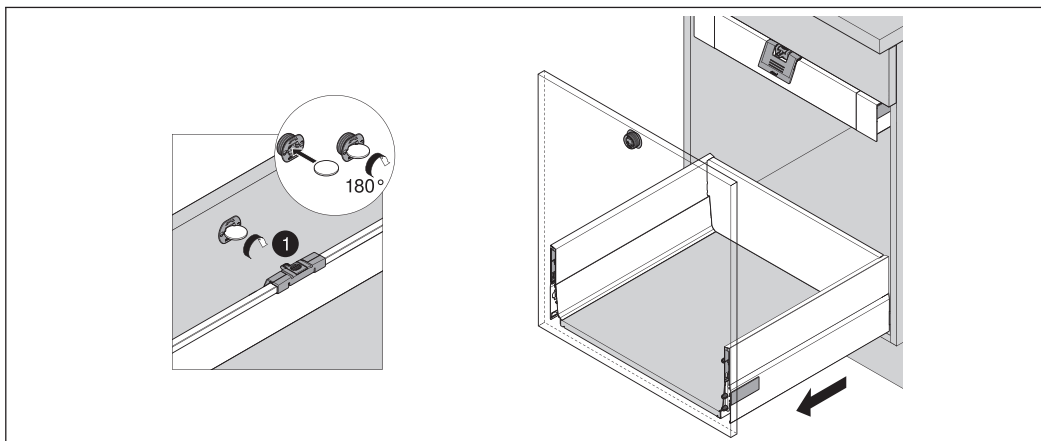

百隆家具配件(上海)有限公司

上海: 021-39203355

北京: 010-88892808

广州: 020-37855208

南京: 025-84442228

四川: 028-84215550

沈阳: 024-83601333

宁波: 0574-88120900

青岛: 0532-88969528

Email: info.cn@blum.com

www.blum.com.cn

blum 百隆®