


Hinge systems 門鉸

Blind corner hinge inset application 內掩邊框門鉸



Inset application
內掩門用
79B9550

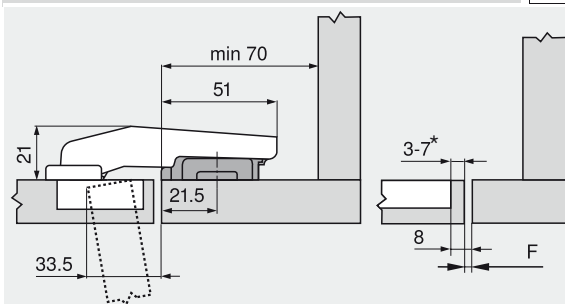


F Gap 門隙

*3-7 mm Drilling distance 鉸杯鑽孔距離


Set mounting plate back by 21.5 mm from the edge of the muntin
距離邊框 21.5 mm 安裝底座

Use 3 mm spaced standard mounting plates to ensure door
and muntin are flush on the inside
使用墊高 3 mm 底座以確保門板與邊框平齊

Hinge boss assembly 鉸杯安裝尺寸

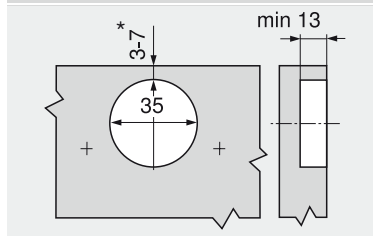


Adjustment 調節

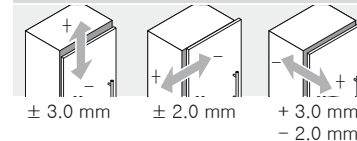


Minimum gap (F) for fronts 門板最少間隙

		Thickness of door 門板厚度 (mm)							
		16	18	19	20	22	24	26	28
Drilling distance TB	3	0.2	0.3	0.4	0.5	0.8	1.0	1.5	1.9
	4	0.2	0.3	0.4	0.5	0.7	1.0	1.4	1.8
	5	0.2	0.3	0.4	0.5	0.7	1.0	1.4	1.8
	6	0.2	0.3	0.4	0.5	0.7	1.0	1.4	1.8
	7	0.2	0.3	0.4	0.5	0.7	0.9	1.4	1.7


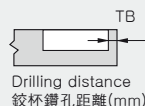


Drilling distance
鉸杯鑽孔距離 (mm)

Cruciform mounting plate 十字底座



- Fixing with chipboard screws
使用木工螺絲
Ø 3.5 and Ø 4 mm
- With height adjustment
高度調節 ± 3 mm

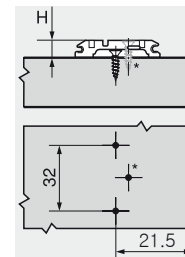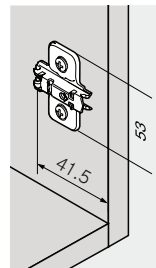


H Height 高度

* Additional screw
附加螺絲



Spacing 墊高	Height 高度	Part no. 編號
3 mm	11.5 mm	173L6130

Blind corner hinge inset application 內掩邊框門鉸


Hinge 門鉸

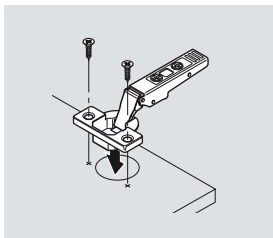


Hinge boss is fixed with 2 chipboard screws
鉸杯以兩口木工螺絲固定

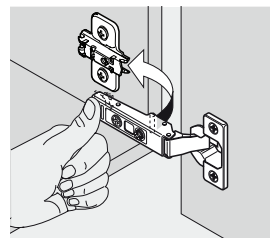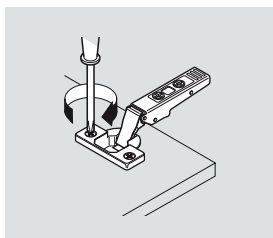


Assembly 安裝

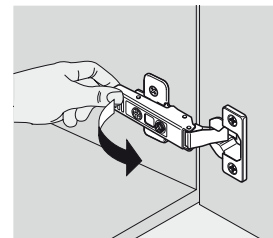


Removal 拆卸

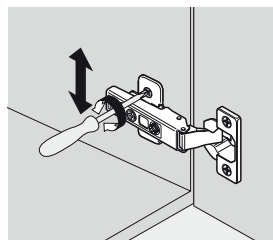

Height adjustment 高度調節

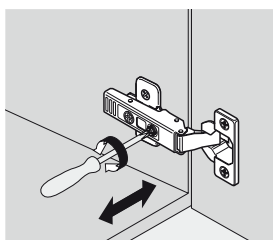

Side adjustment 左右調節

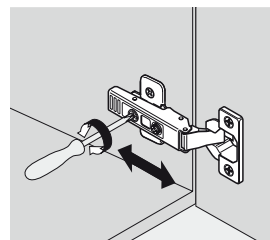


Depth adjustment 深度調節

Cleaning Instructions 清潔指引

- Wipe using lightly damp soft cloth
用微濕的軟布抹擦
- Only use clean water,
do not use chemical cleaners
使用清水便可, 請勿使用化學清潔劑

Number of Hinges 門鉸數量

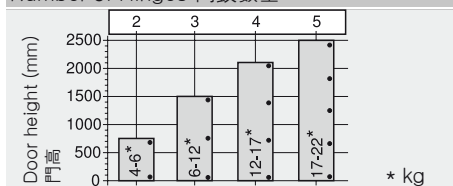

The number of hinges depends on the door weight and front height
門鉸數量取決於門的重量和高度

To achieve good stability, distances between hinges should be as large as possible
請盡量拉大門鉸之間的距離以保持良好的穩定性

Information on weight and height apply to a standard door width of 600 mm
負載數據和高度應用於門闊 600 mm

Blum Furniture Hardware
Hongkong Limited

Tel.: 852-2572 2816

Fax: 852-2572 2817

E-Mail: info.hk@blum.com
www.blum.com.hk

